
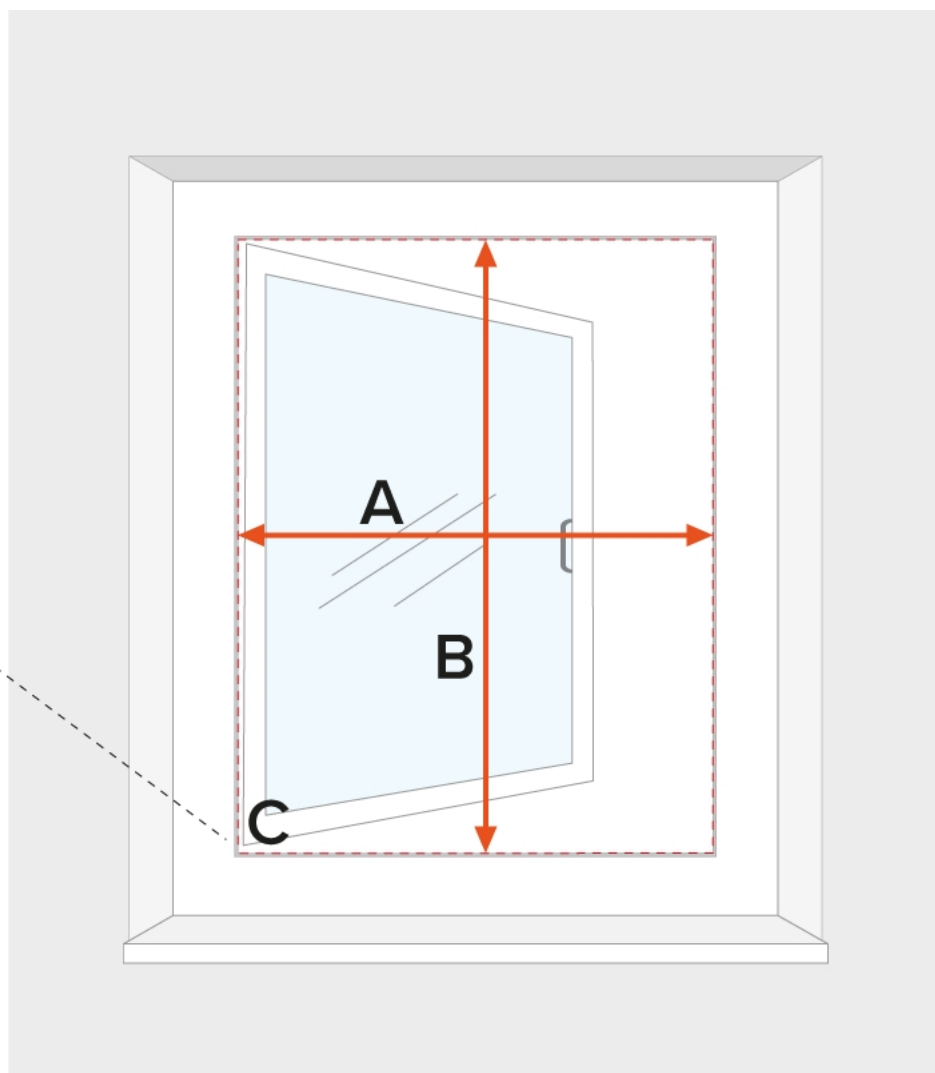


Measurement guide

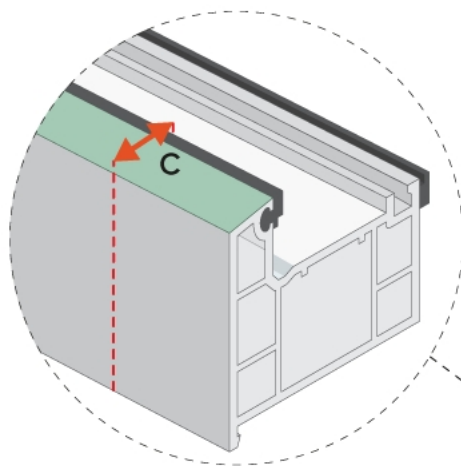

width = A

height = B

Specify the height and width of the window opening in the configurator, by measuring the edges of the window frame (reveal) from the outside.

thickness of glazing bead = C

Measure the thickness of the outer skirting of the window frame including the seal.



All dimensions must be entered in millimeters(mm)