

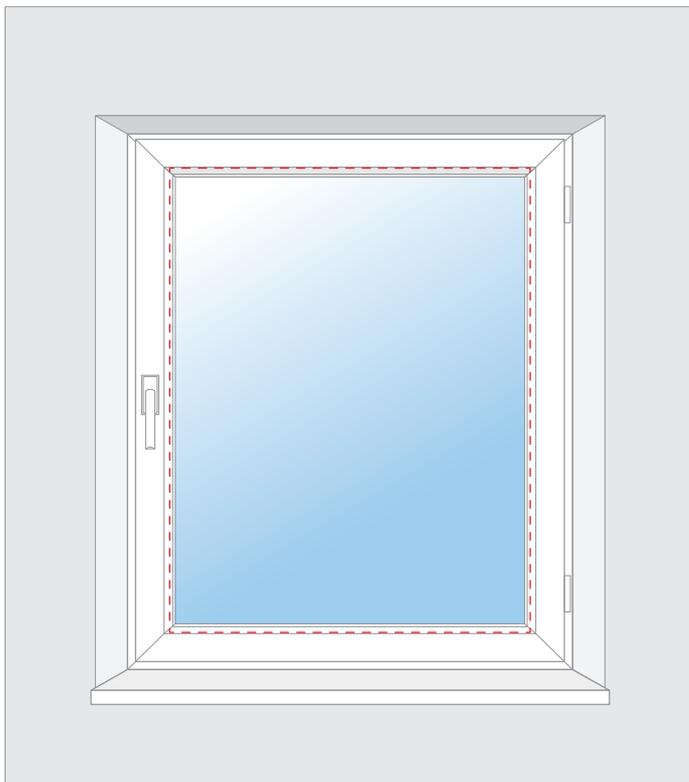


Measurement manual for InLight Venetian Blinds 16mm/25mm

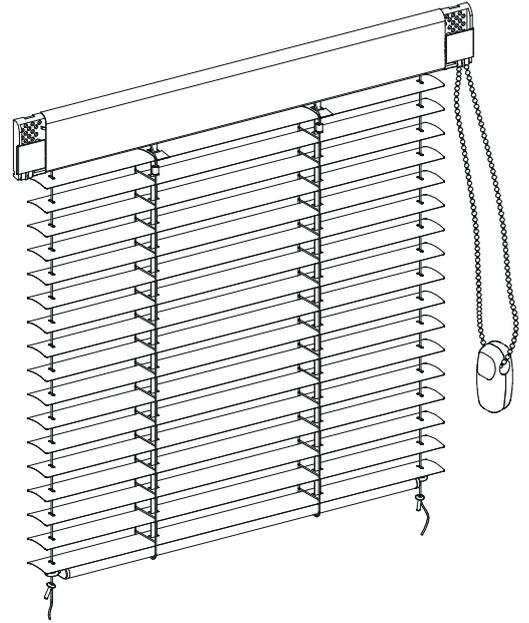

 Area of mounting to glazing beads.

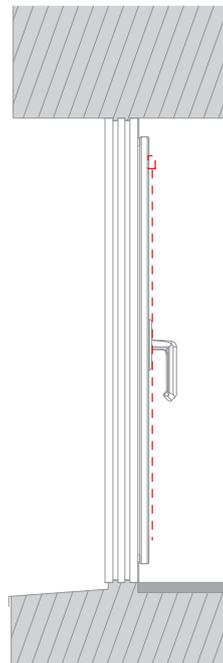

Measurements for installation to the glazing bead

 All dimensions must be entered in millimeters (mm)

In order to ensure the most accurate measurements, please enter the width and height of window panes, together with the thickness of the glazing gasket (fig.2.).

When specifying the assumed width in the configurator, enter the measurement value reduced about 2mm:

$$\text{width} = A - 2\text{mm}$$

Example:
 $700 - 2 = 698\text{mm}$

By entering the height in the configurator, enter the measurement value reduced by 2mm:

$$\text{height} = B - 2\text{mm}$$

Example:
 $1300 - 2\text{mm} = 1298\text{mm}$

