


# Measurement instructions for Drill Free roller blinds

## Drill Free system with non-invasive mounting on the window sash (handles)

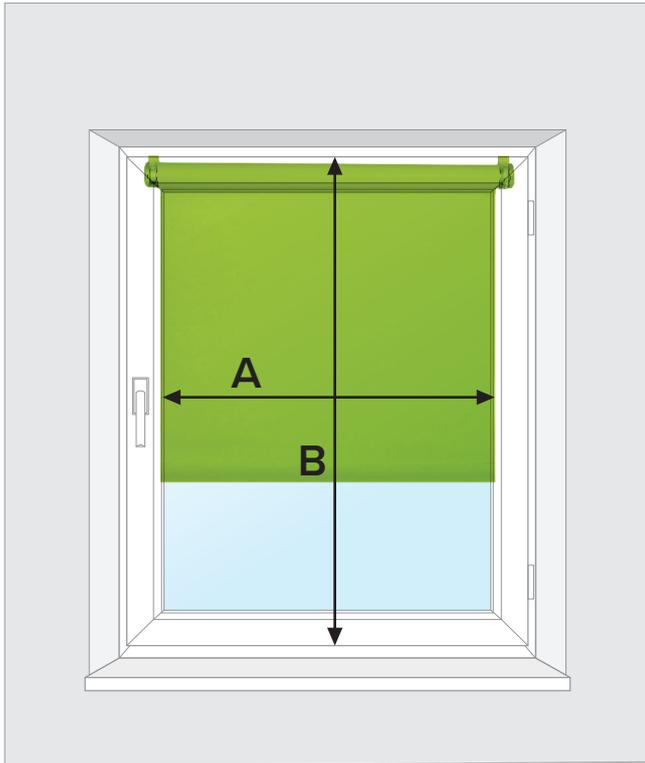

**!** All dimensions must be entered in millimeters (mm)


To correctly specify dimensions in the form, measure the space between glazing beads. Plan the width of the material, so it would be wider than the measured value, but did not interfere with protruding elements, like a handle.

**width = A**

Measure the **height** of the window sash.

Enter the height in the configurator, enter the measurement value:

**height = B**

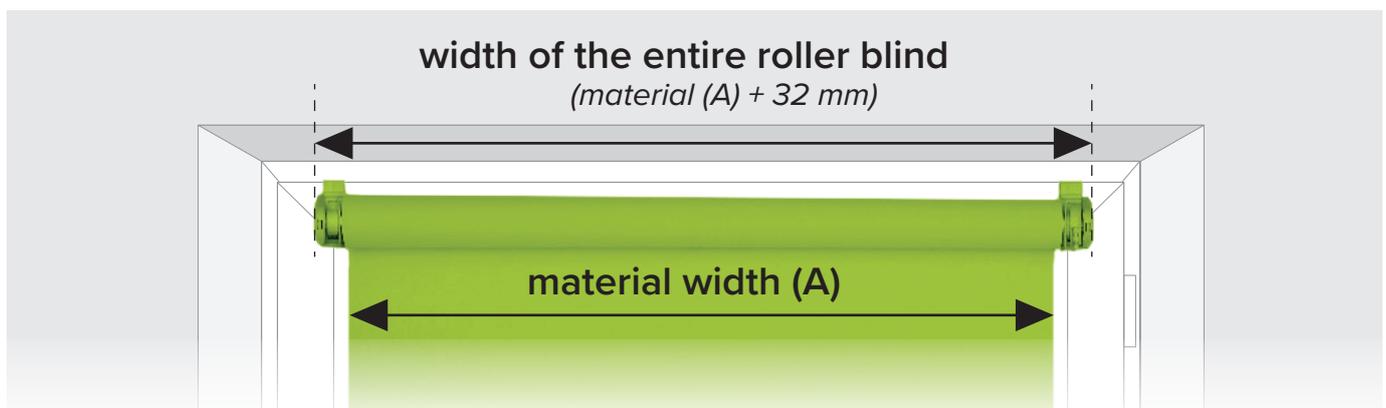

Remember that the complete roller blind will be 32 mm wider than the value you specified. The width of the material will remain the same, these extra millimetres are due to the width of the mechanism.