

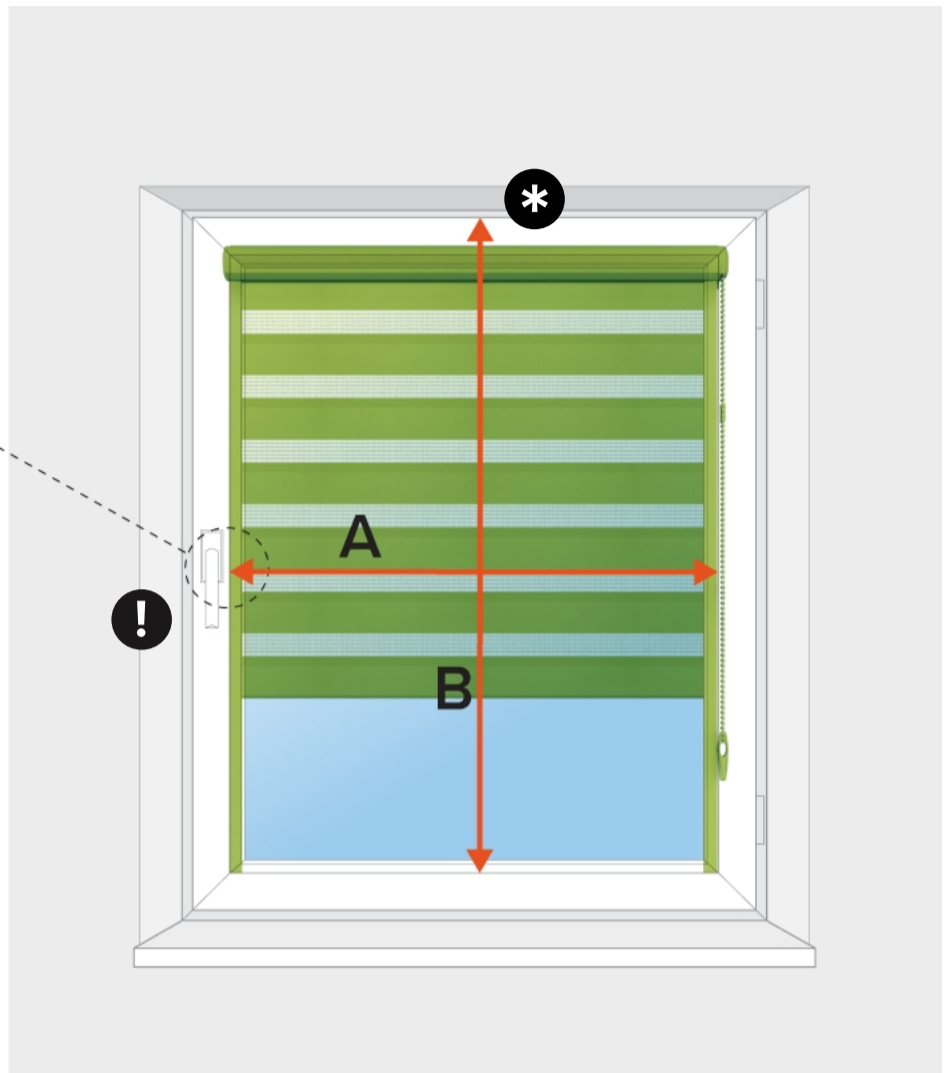


# DAY & NIGHT ROLLER BLIND MEASURING GUIDE

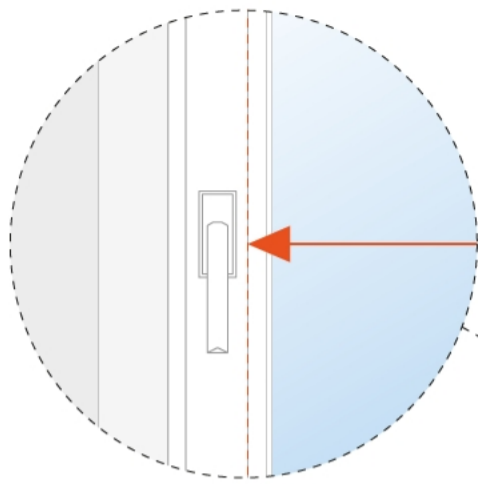


Width = A

Height = B

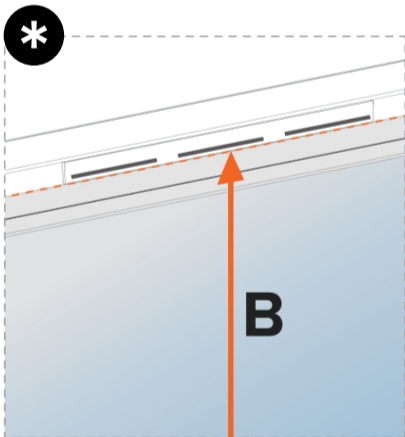

**Note:**

If the window has an air vent, the measurement should start from the bottom edge of the air vent.

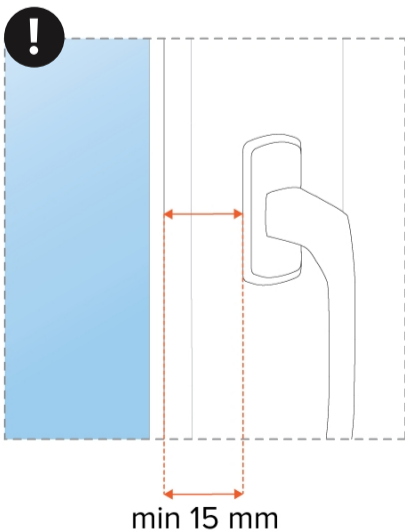

**Note:**

Make sure that on each side of the window sash there is at least 15 mm of flat surface in order to be able to glue the guides without any difficulties.



All dimensions must be entered in millimeters (mm)