
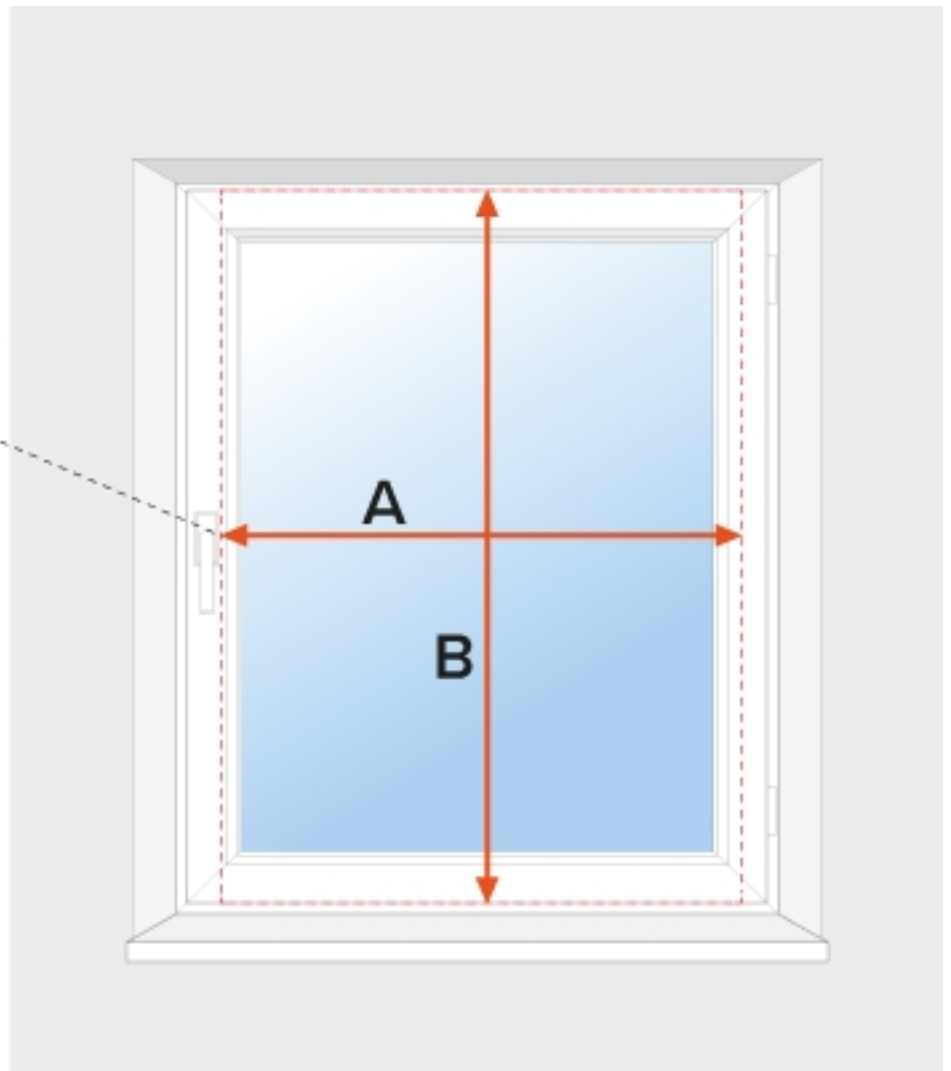



Mounting to the window sash

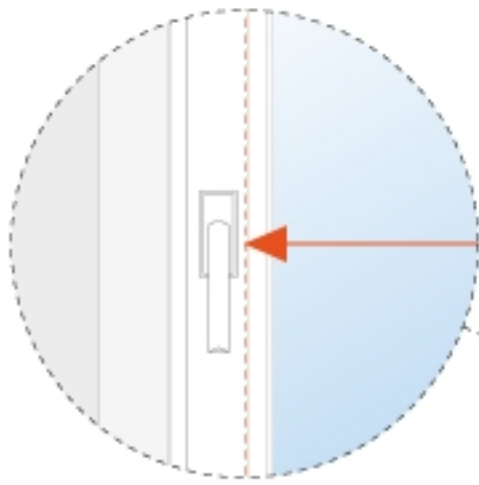

width = A

height = B

Mounting in a window recess

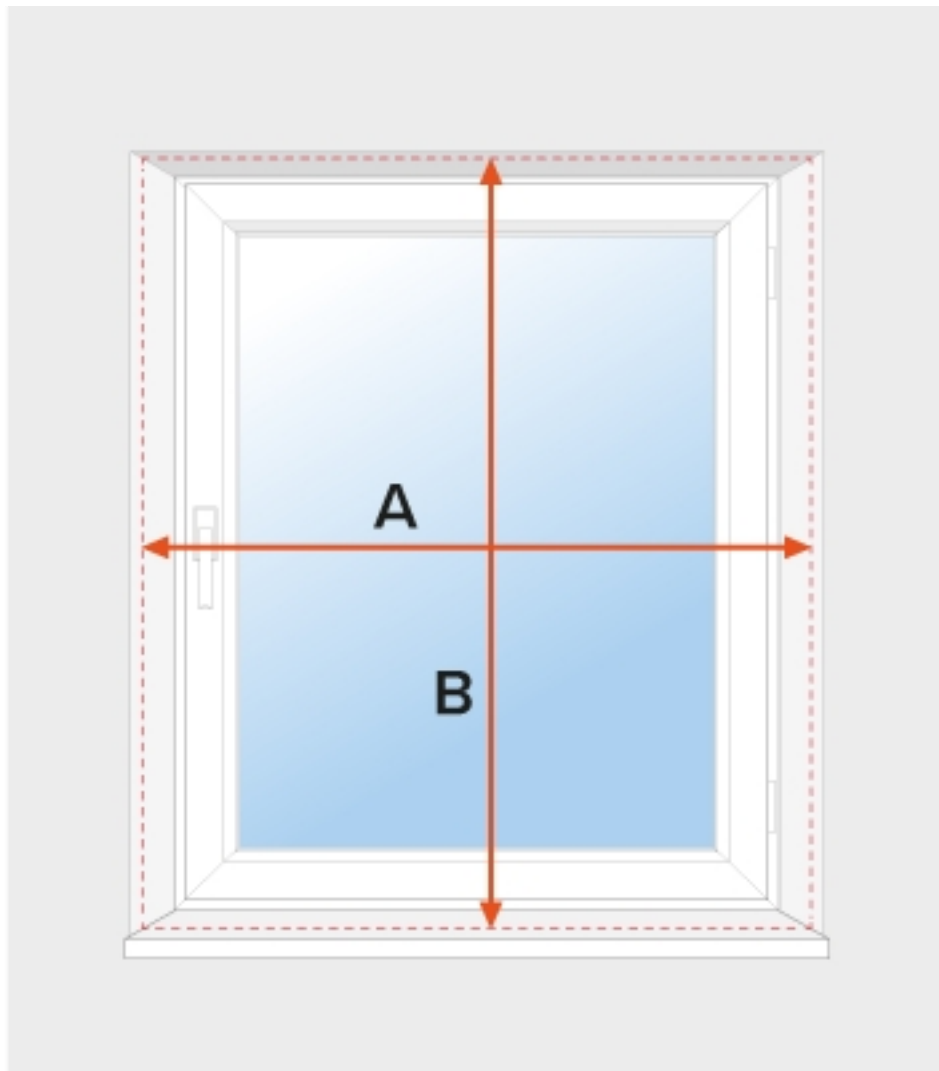

width = A

height = B


Attention:

Significant irregularities of the window recess may cause difficulties in product installation. In this case, measure the recess at three points and provide the smallest dimension.



All dimensions must be entered in millimeters(mm)

Wall mounting

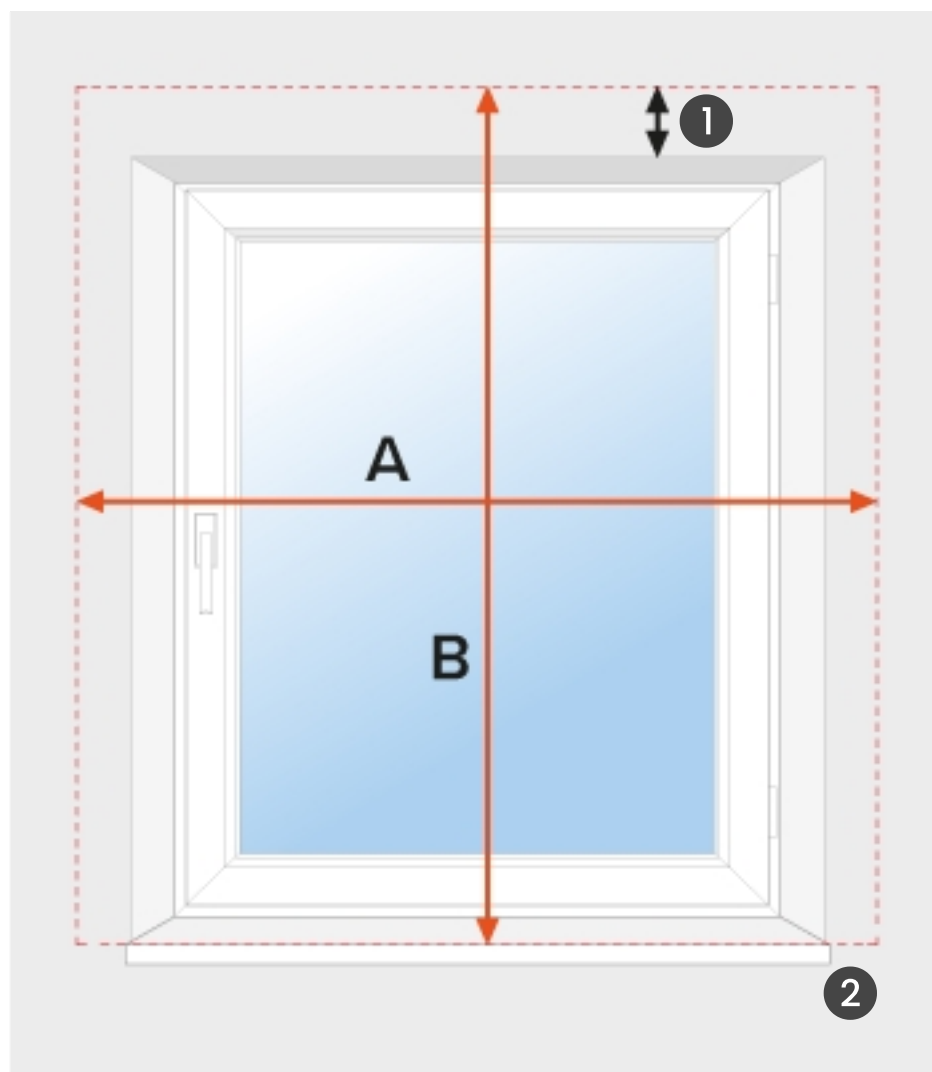

width = A

height = B

1 When measuring the height (B), be aware of the height of the roman blind when folded:

The total height
of the roman blind

Height of folded blind

Up to 1000 mm

max. 180 mm

Up to 2000 mm

max. 260 mm

Up to 3000 mm

max. 340 mm

Please find the exact blind dimension in the product configurator.

2 You can decide yourself how far you want your venetian to go down, but make sure that the elements that the roman blind can encounter when going down, such as the sill, are not an issue.



All dimensions must be entered in millimeters(mm)