


MANUAL INSTRUCTIONS – Mounting to the window frame

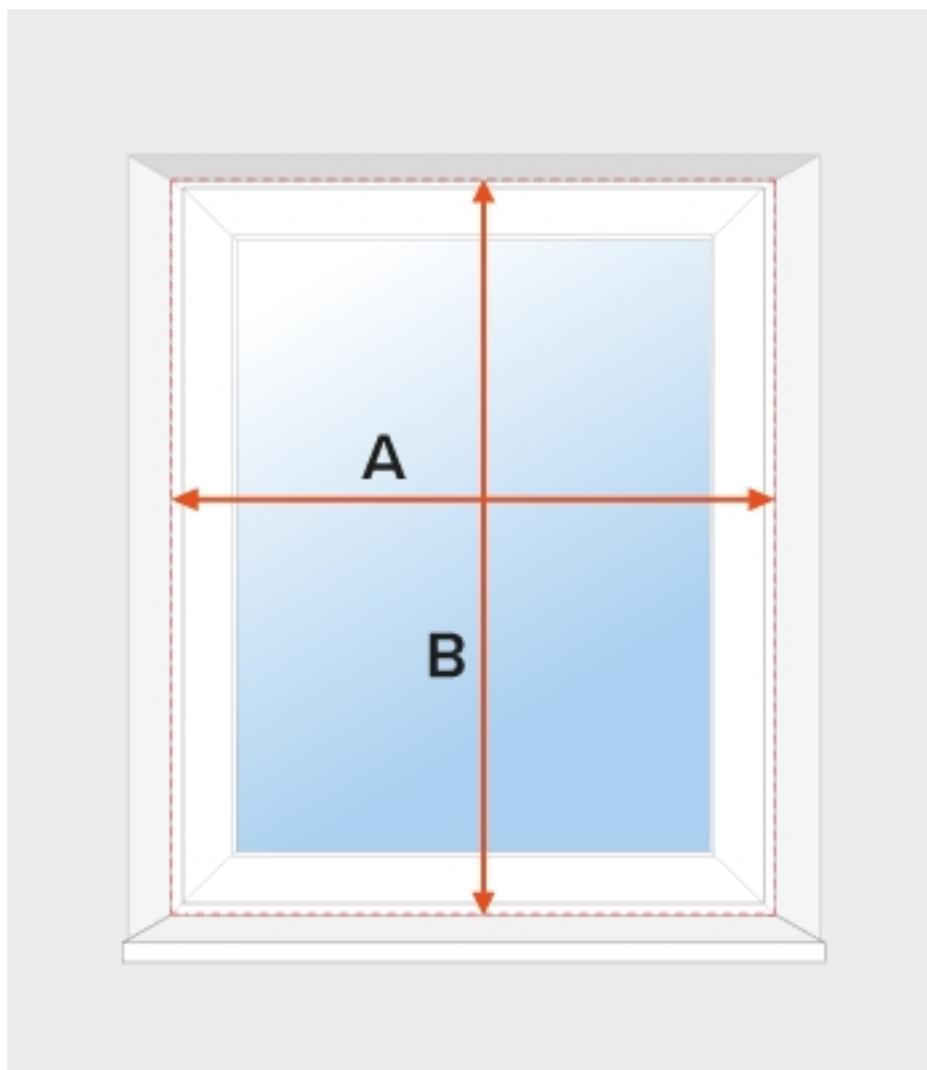

width = A

height = B

Measure the width and height of the frame (inner edges of the recess).


A note of caution-

To ease the installation of the product, we automatically subtract about 2 mm from the given dimensions. The total size of the product will be calculated automatically.



All dimensions must be entered in millimeters(mm)

MANUAL INSTRUCTIONS – Mounting in a recess

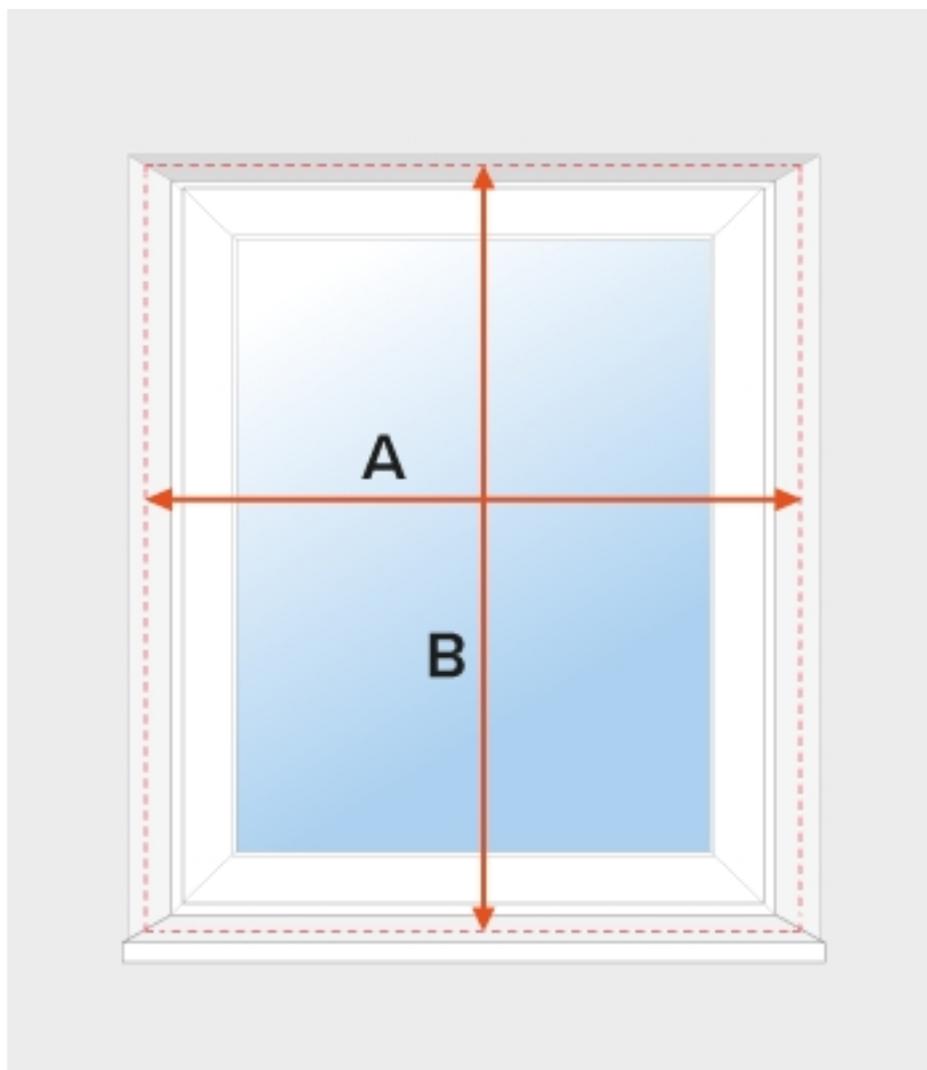

width = A

height = B

Measure the width and height to the edges of the recess.

A note of caution-


To ease the installation of the product, we automatically subtract about 2 mm from the given dimensions. The total size of the product will be calculated automatically.

Significant unevenness in the window recess can make it difficult to mount the product - measure the recess in three points and give the smallest dimension. Remember to take all measurements at the same recess depth. To do this, use a spirit level and/or a ruler to mark the mounting points of the mosquito net.



All dimensions must be entered in millimeters(mm)

MANUAL INSTRUCTIONS – Mounting on the wall

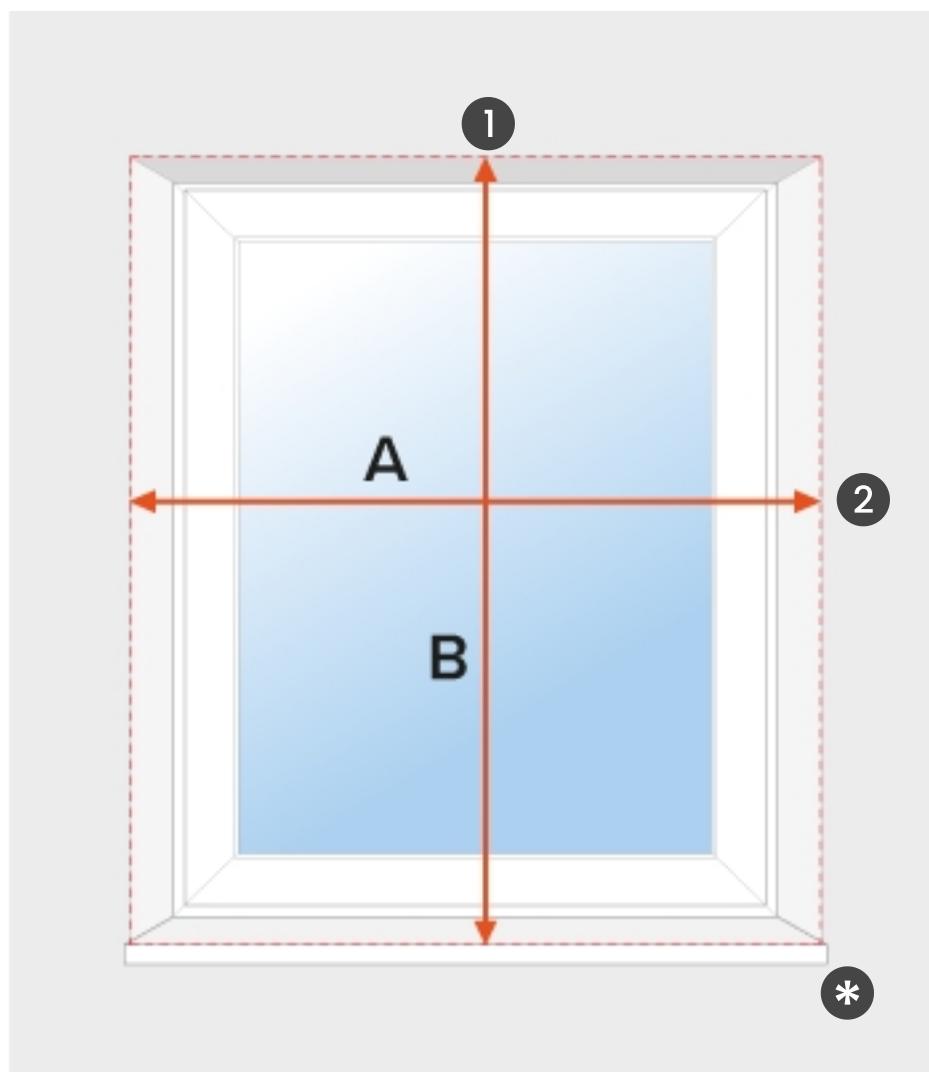

width = A

height = B

Measure the width and height of the window recess opening (outer edges of the recess).

A note of caution-

Please note: The total size of the product will be calculated automatically.

- 1 The mosquito net headrail height will be added to the height given.
+49 mm when $B < 1800$ mm +57 mm when $B \geq 1800$ mm
- 2 The width of the guides (+70 mm) will be added to the specified width.
- * If you want to cover a larger area, consider protruding elements such as a windowsill.



All dimensions must be entered in millimeters(mm)