


# Measurement guide for mounting on the wall

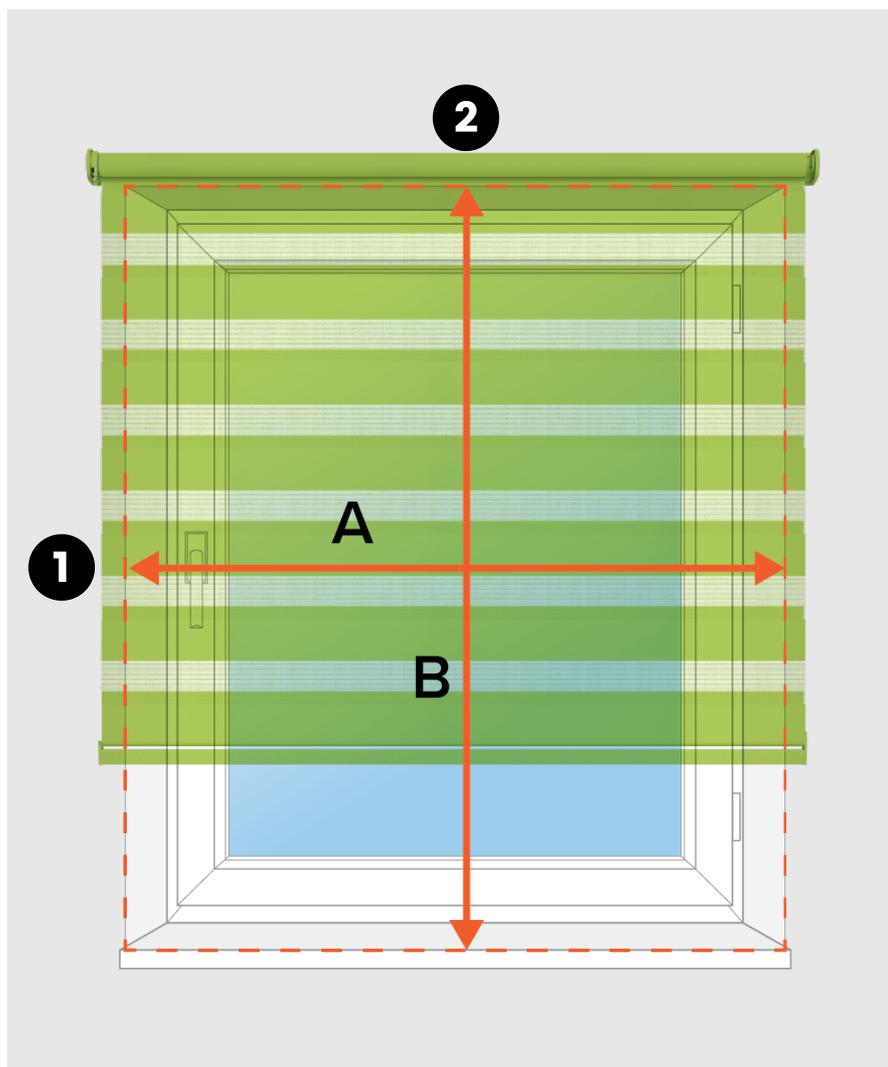

**width = A**

The 45 mm will be automatically subtract from the given dimensions.

**1** NOTE:  
The fabric will be 43 mm narrower than the overall width of the product.

**2** NOTE:  
If you want to cover a larger area, you can give higher values than your measurements.


**height = B**

The 120 mm will be automatically subtract from the given dimensions.

**!** All dimensions must be entered in millimeters (mm)

# Measurement guide for mounting in the recess.

---

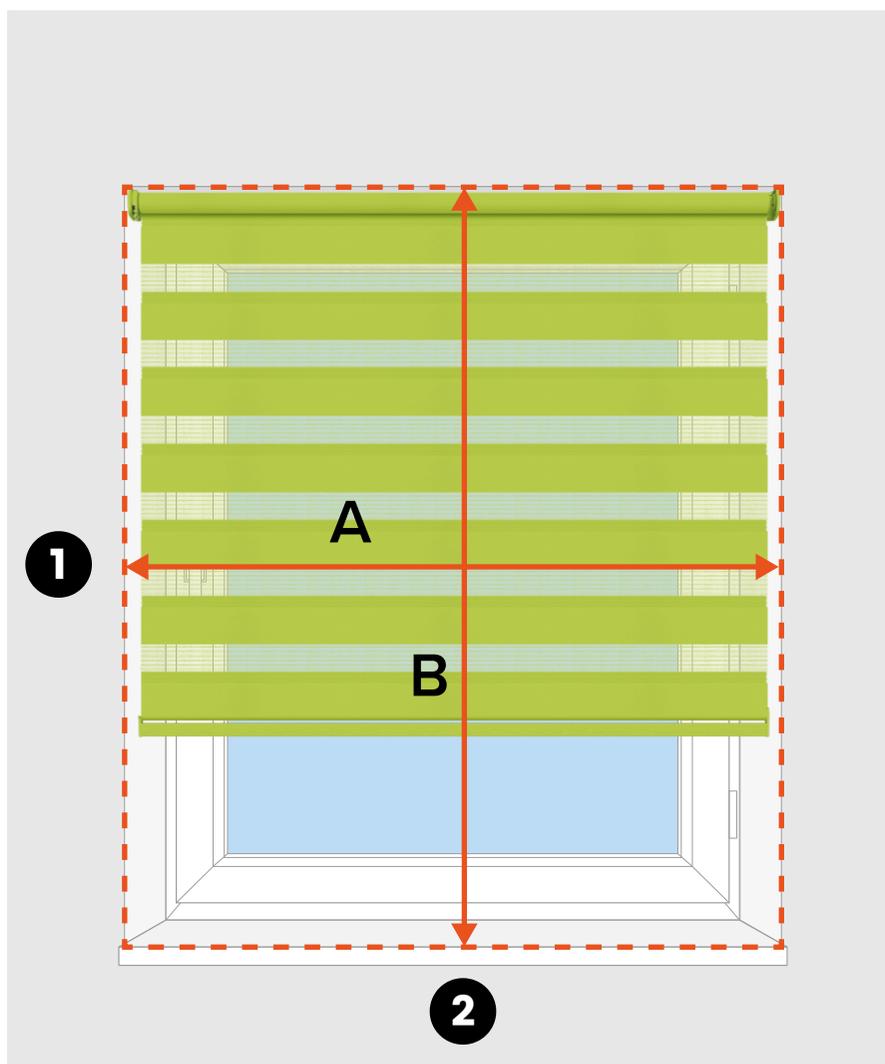

**width = A**

**height = B**

The 4 mm will be automatically subtract from the given dimensions.


**1** NOTE:  
The fabric will be 43 mm narrower than the overall width of the product.

**2** NOTE:  
Remember to pay attention to any protruding elements such as e.g. window sills or door handles, which could prevent the blind from functioning properly.

 All dimensions must be entered in millimeters (mm)

## Measurement guide for mounting on the ceiling.

---

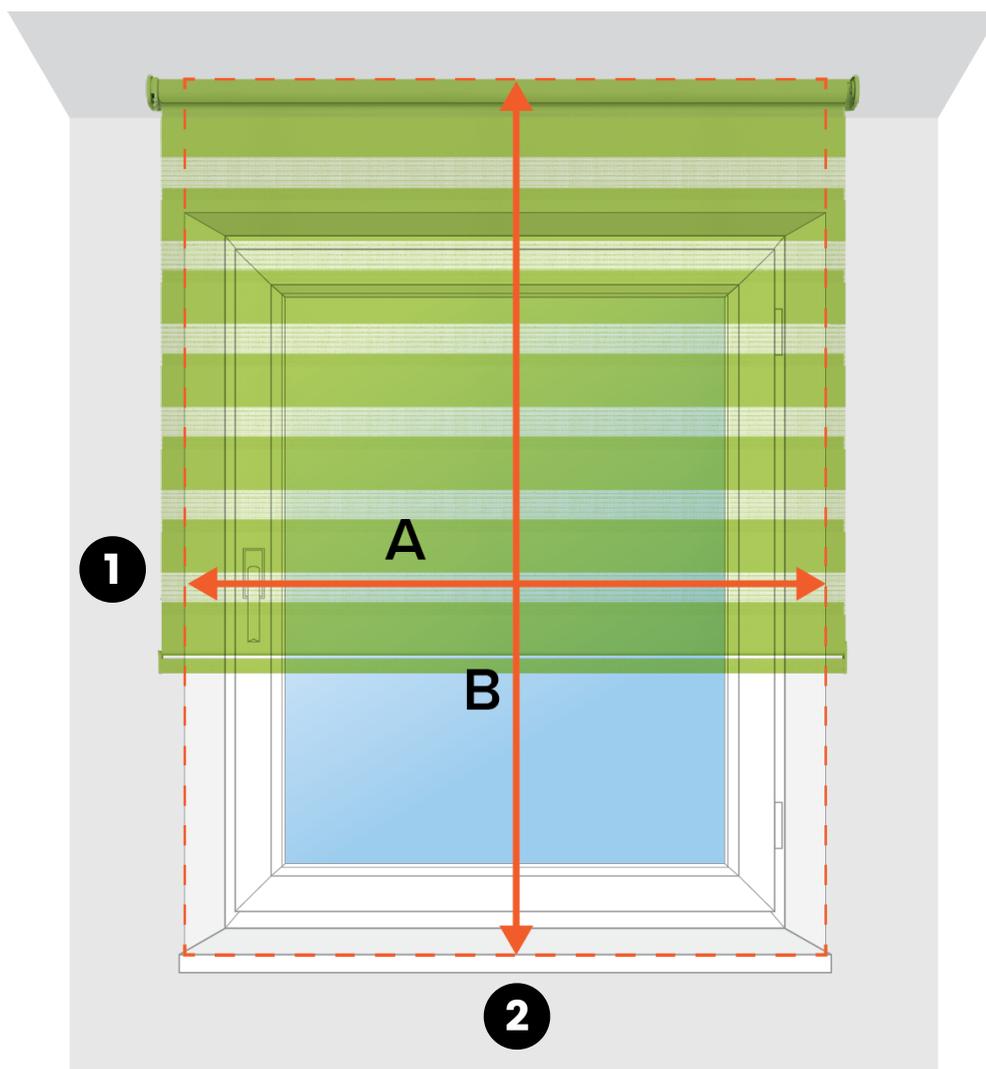

**width = A**

**height = B**

Measurement guide for mounting on the ceiling.

**1** NOTE:  
The fabric will be 43 mm narrower than the overall width of the product.

**2** NOTE:  
If you want to cover a larger area, you can give higher values than your measurements.  
NOTE: pay attention to protruding elements such as a windowsill, which could prevent the blind from functioning properly.

**!** All dimensions must be entered in millimeters (mm)