
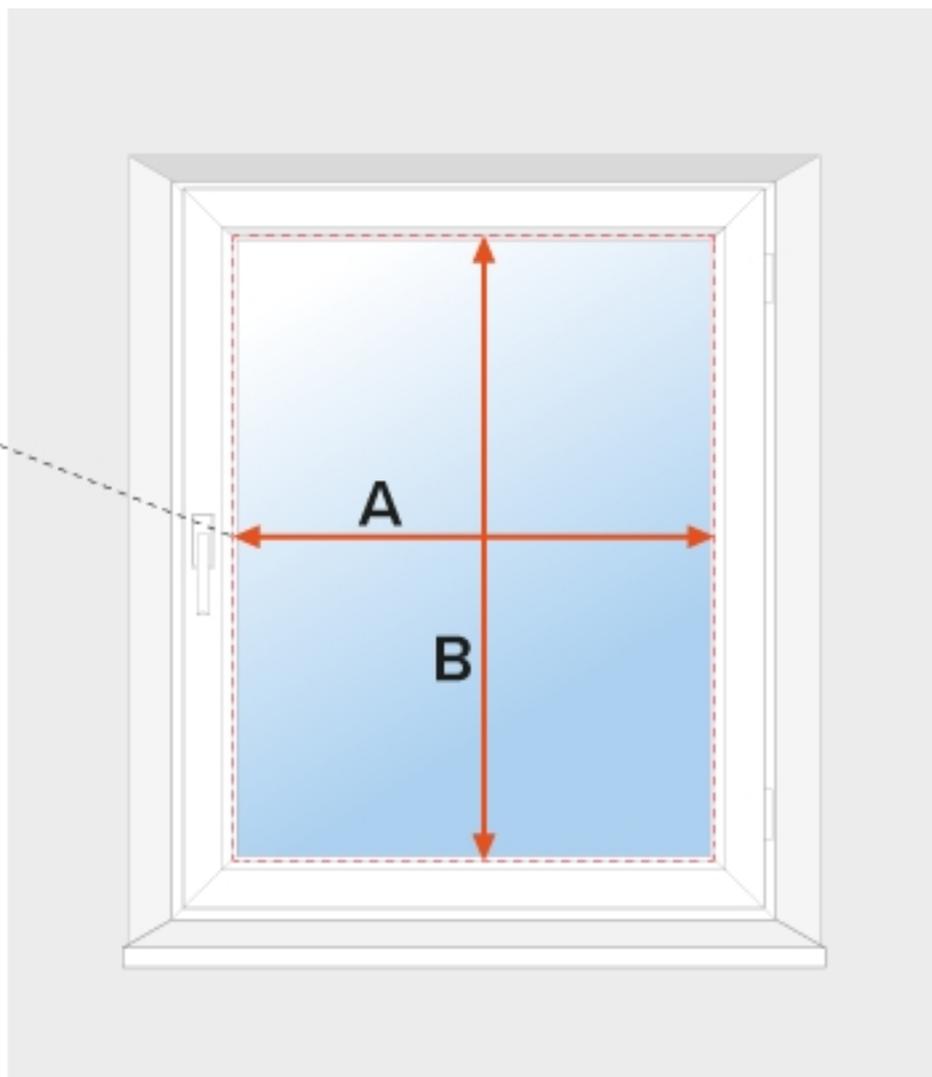


Mounting to the glazing bead

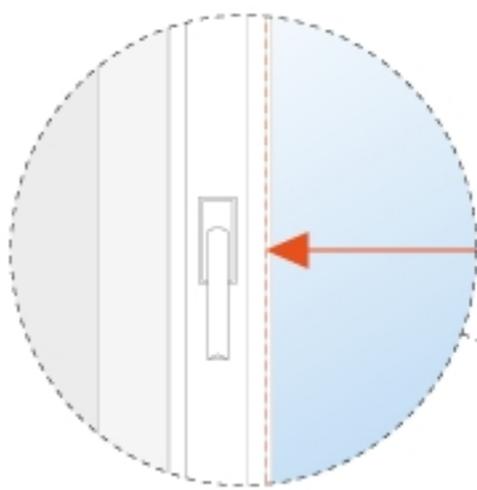

width = A

Total product width will be reduced by 5 mm



height = B

Total product height will be increased by 10 mm



All dimensions must be entered in millimeters(mm)

Mounting to the window sash

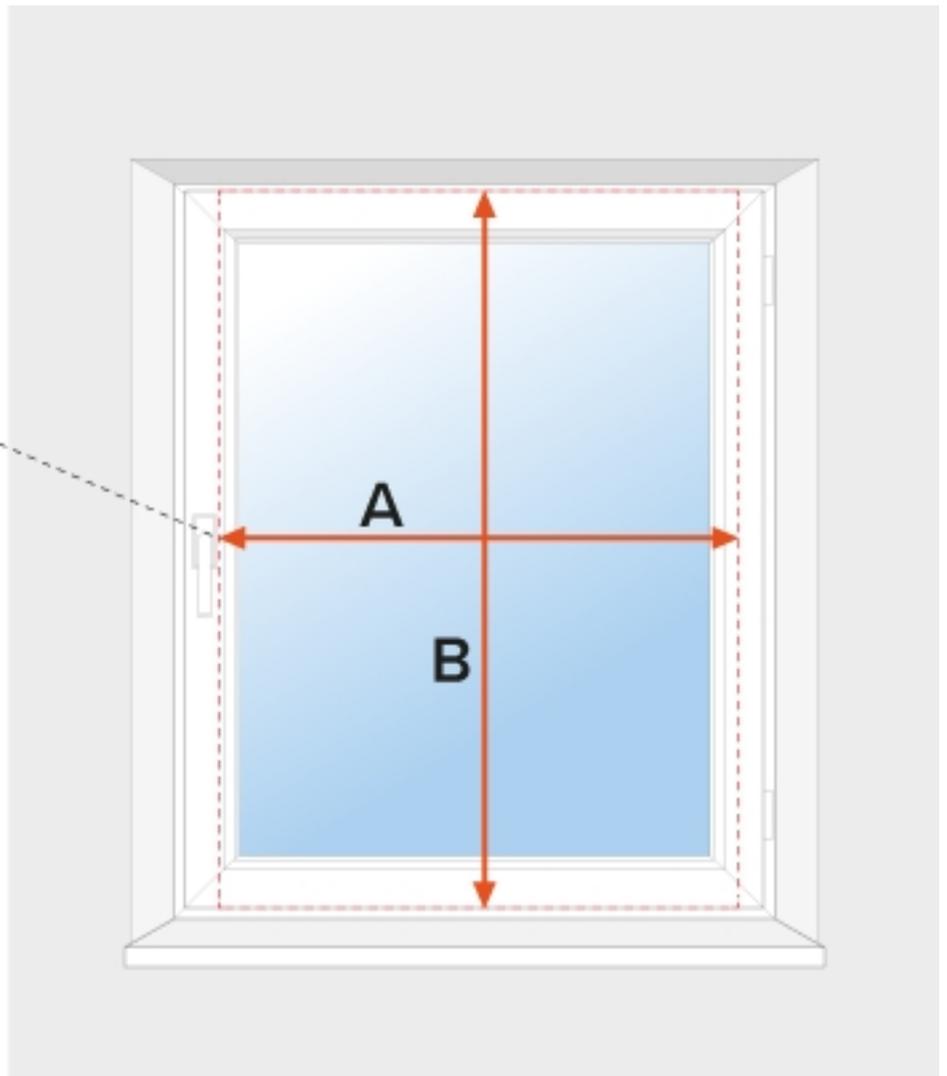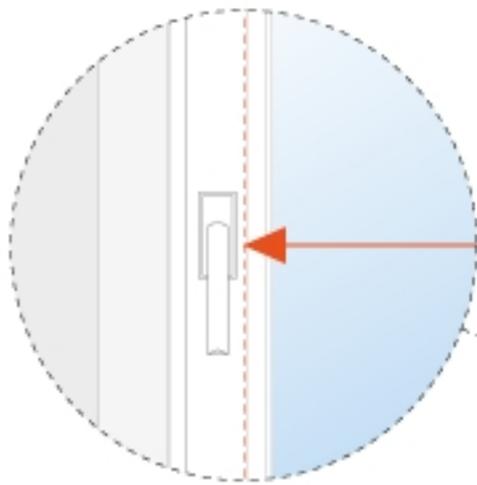


width = A

height = B

 All dimensions must be entered in millimeters(mm)

Mounting in a window recess

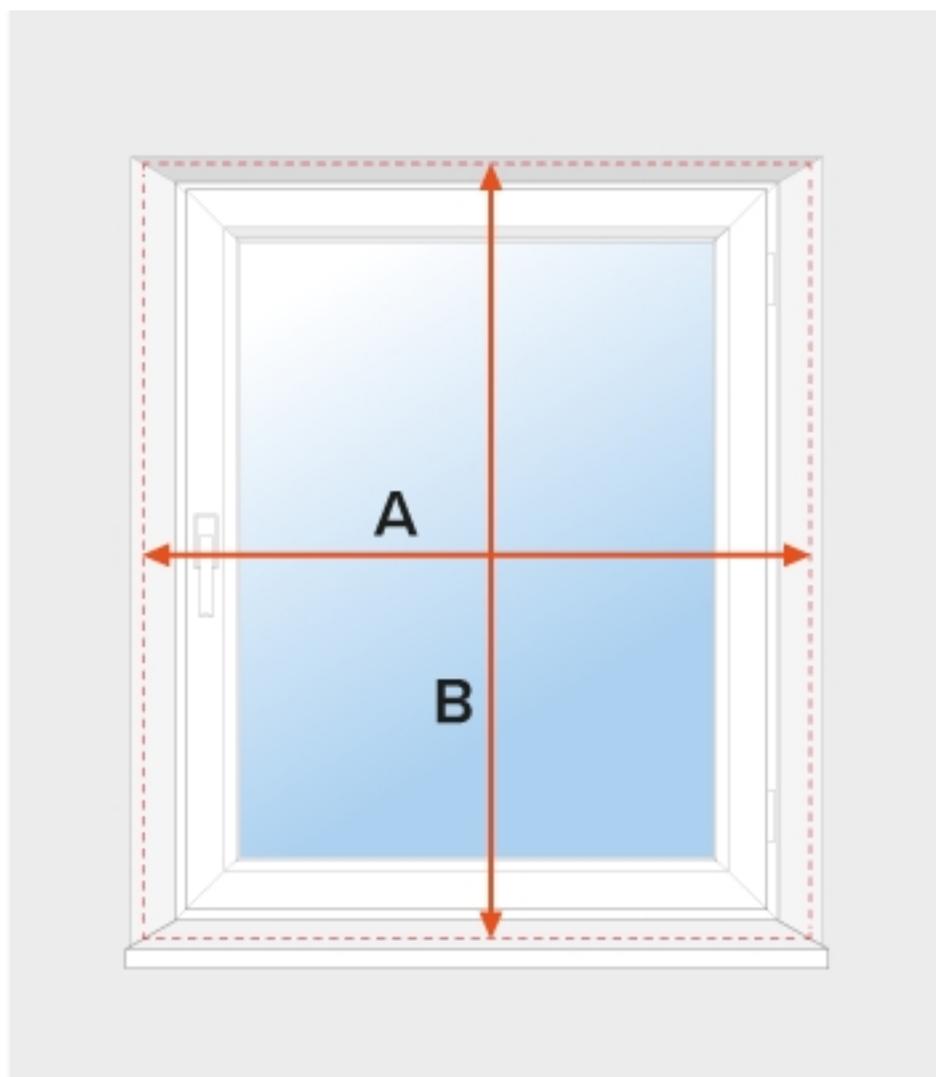

width = A

Total product width will be reduced by 2 mm

height = B

Total product height will be reduced by 2 mm


Attention:

Significant irregularities of the window recess may cause difficulties in product installation. In this case, measure the recess at three points and provide the smallest dimension.



All dimensions must be entered in millimeters(mm)

Wall mounting

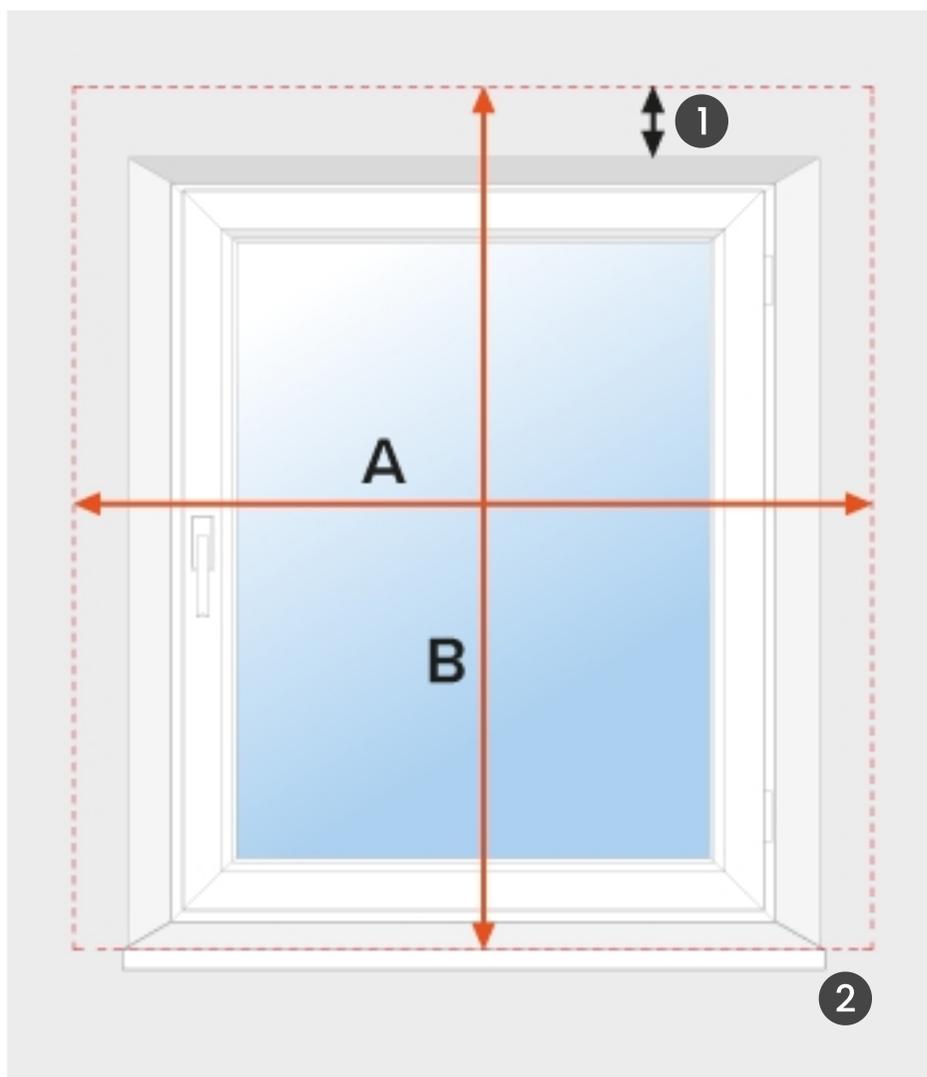

width = A

height = B

1 When measuring the height (B), be aware of the height of the venetian blind when folded:

The total height of the venetian blind	Height of folded Venetian blind
Up to 1000 mm	max. 180 mm
Up to 2000 mm	max. 285 mm
Up to 3000 mm	max. 385 mm

2 You can decide yourself how far you want your venetian to go down, but make sure that the elements that the venetian blind can encounter when going down, such as the sill, are not an issue.



All dimensions must be entered in millimeters(mm)