domondo

Do you need help? Contact us:
Call us: **0113 868 1334**   email: **enquiries@domondo.co.uk**
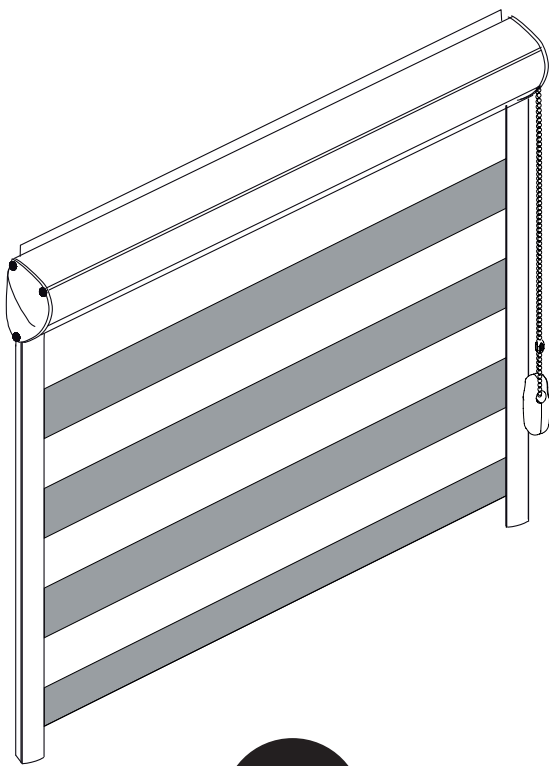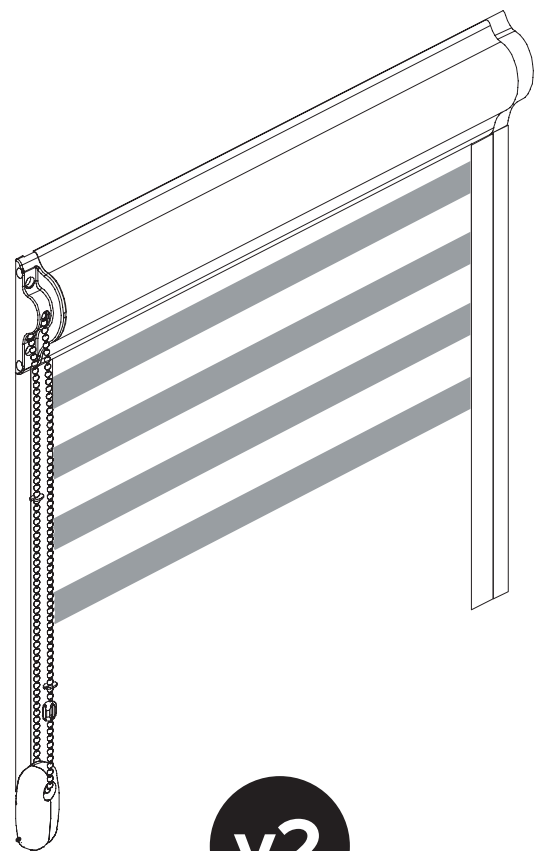
page 1 / 3

Measuring guide
for PureNight cassette
Day & Night blinds

v1

**PVC cassette system
with side channels, non-invasive
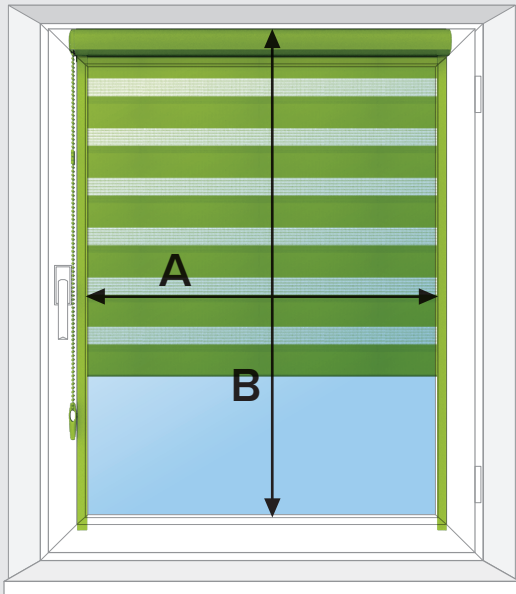Mounting on window sashes
(glued)**

v2

**Aluminium cassette system
with side channels, non-invasive
Mounting on window sashes
(screwed)**

domondo

Do you need help? Contact us:

Call us: **0113 868 1334**   email: **enquiries@domondo.co.uk**

Fig.1.

v1

PVC cassette system with side channels, non-invasive Mounting on window sashes (glued)
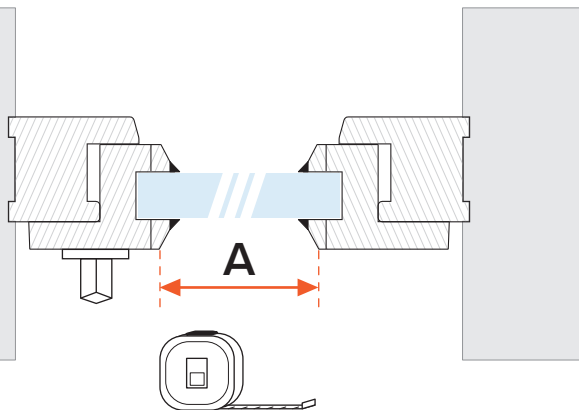
⚠️ **All dimensions must be entered in millimeters (mm)**

Measure the distances between the edges of **the window beading** (fig.2.).

Enter the **measurement** value:

width = **A**

Note: make sure that the distance between the edge of the glazing bead and the handle is at least **10mm** (fig.3.) in order to mount the side channels.

Measure the distance between **the top edge of the window sash and the bottom edge of glazing bead** (fig.4.).

Enter the **measurement** value:

height = **B**

Fig.2.

A

Fig.3.

min. 10mm

Fig.4.

B

domondo

Do you need help? Contact us:

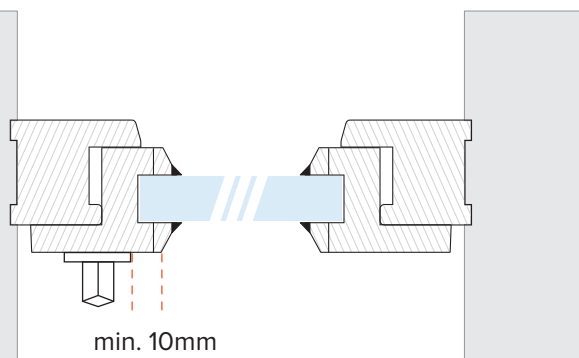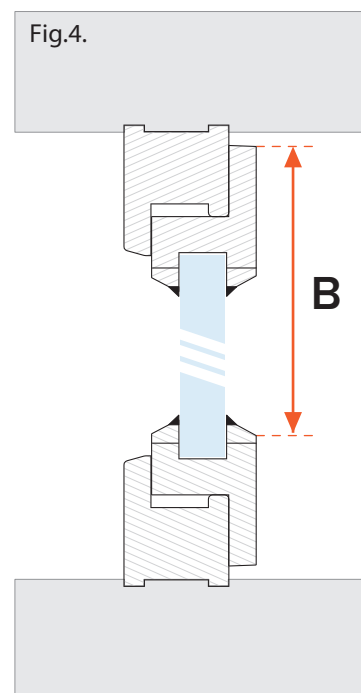Call us: **0113 868 1334**   email: **enquiries@domondo.co.uk**
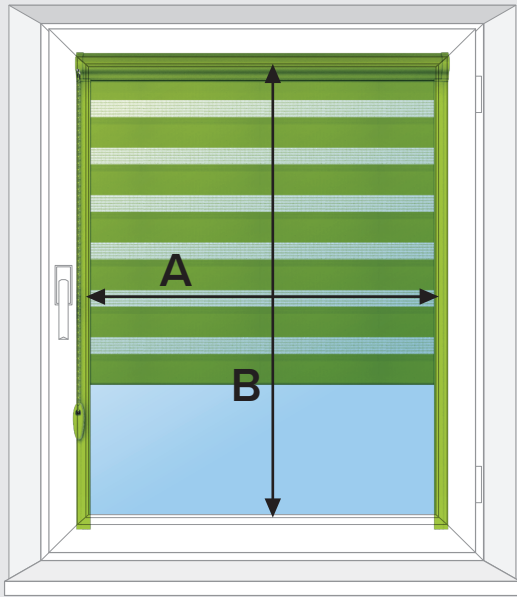
Fig.1.

v2

Aluminium cassette system with side channels, non-invasive Mounting on window sashes (screwed)

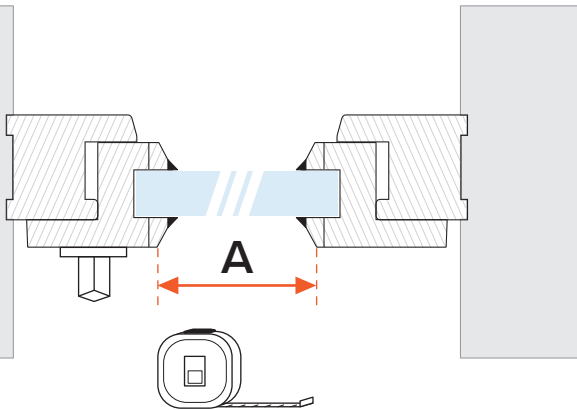⚠ **All dimensions must be entered in millimeters (mm)**

Measure the distances between the edges of **the window beading** (fig.2.).

Enter the **measurement** value:

width = A

Note: make sure that the distance between the edge of the glazing bead and the handle is **at least 10mm** (fig.3.) in order to mount the side channels.

Measure the distances between the edges of the window beading (fig4).

Enter the **measurement** value:

height = B

Fig.2.

A

Fig.3.

min. 10mm

Fig.4.

B